



Lynx North

New Noise Wall

General Aviation Hangars

Twy A

Lynx South Terminal


ATCT

Tower Access Road Gate

DTS Tower Controlled Airfield Pavements



* Note that when driving on the airfield, permission must be received from the tower to enter the controlled surfaces including Twy A, ladder taxiways and the runway. Tower call sign will be *Destin Ground* via 121.6 frequency on an ICOM radio or a SLERS is also in the tower (how Destin Fire will communicate and gain permission to the CMA during an emergency response). Hold short lines as shown below are located at the throat of each ladder taxiway to access aprons.

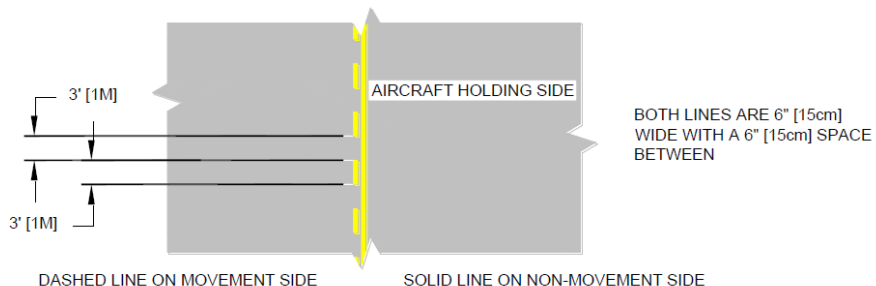

NON-MOVEMENT AREA MARKINGS

